

# REGULATOR RG180LN3/4XLN3/4 PO.23MBAR 6M3/H UPSO, RV CODE 200267

With an inlet pressure between 30 and 500mbar, the regulator maintains the outlet pressure between 21 and 25mbar for flow rates between 0.6 and 6m3/h.

### **FEATURES**

Inlet pressure: 30-500mbar

Output pressure: 19-23mbar

• Securities: UPSO (17mbar), RV (42-75mbar)

Nominal flow rate: 6m3/h

Pressure tapping: -

Connections: LN3/4XLN3/4


Disposition: 180°

Conduction for venting: -



#### **DIMENSIONS**



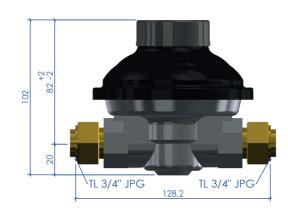



recgas@recgas.com



#### **MATERIALS**

- Membranes and seals, in NBR resistant to Liquefied Petroleum Gas (LPG), Natural Gas (NG) and Synthetic Natural Gas (SNG)
- Aluminum body
- Galvanized steel cover
- Cataphoresis treatment with high resistance on cover and body

- Galvanized steel springs
- Non-metallic internal parts, in PA with fiberglass and acetal resin (POM)
- Stainless steel filter
- Manufactured in the EU

#### **COMPLIANCE WITH STANDARDS**



AENOR certificate in accordance with the UNE 60402-1 (2008) standard



CE-certified according to EN 88-1:2011 + A1:2016, EN 13611:2019 and EN13611:2019/AC:2021

### **INSTALLATION AND COMMISSIONING**


- Check inlet pressure. It must not exceed 500 mbar.
- Fit the regulator respecting the gas flow. See flow arrow on the bottom of the regulator.
- Once the regulator is in place, check that there are no leaks at the regulator connections.
- With all consumption points downstream of the regulator closed, open the gas tap upstream of the regulator.
- In the case of automatic VIS MIN, wait a few seconds (approx. 15-20) until the VIS is reset.


- In case of manual VIS MIN, actuate the reset device on the controller (by pulling on it) for about 2 seconds.
- The regulator will start to regulate when there is any demand for consumption.

recgas@recgas.com



# **BEHAVIOURAL CURVES**

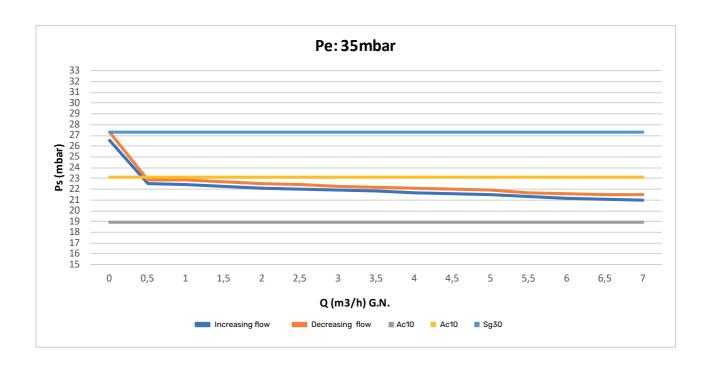

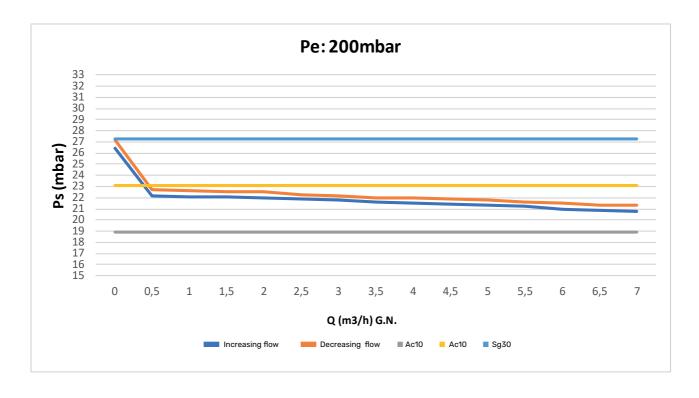



# **BEHAVIOURAL CURVES**

