

# **REGULATOR RG180FF3/4** PO.21MBAR 5M3/H UPSO, RV (WITH CONDUCTION) **CODE 200227**

With an inlet pressure between 0.1 and 1bar, the regulator maintains the outlet pressure between 19 and 23mbar for flow rates between 0.5 and 5m3/h




#### **FEATURES**

- Inlet pressure: 0,1-1 bar
- Output pressure: 19-23mbar
- Securities: UPSO (15mbar), RV (42-75mbar)
- Nominal flow rate: 6m3/h
- Pressure tapping: -
- **Connections:** FF3/4
- Disposition: 180°
- Conduction for venting: F3/4(Whitworth)



## DIMENSIONS

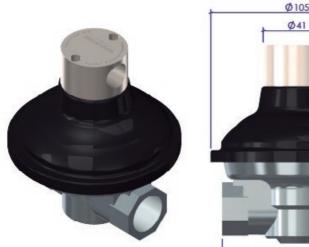





**C** TELEPHONE +34 944 982 043 FAX +34 944 982 147

@ EMAIL recgas@recgas.com 🕀 WEB www.recgas.com

#### • ADDRESS

Alonsotegi Elkartegia Módulo Nº12, 48810 Alonsotegi, Bizkaia (Spain)



#### MATERIALS

- Membranes and seals, in NBR resistant to Liquefied Petroleum Gas (LPG), Natural Gas (NG) and Synthetic Natural Gas (SNG)
- Aluminum body
- Galvanized steel cover
- Cataphoresis treatment with high resistance on cover and body

- Galvanized steel springs
- Non-metallic internal parts, in PA with fiberglass and acetal resin (POM)
- Stainless steel filter
- Manufactured in the EU

### **COMPLIANCE WITH STANDARDS**



AENOR certificate in accordance with the UNE 60402-1 (2008) standard



CE-certified according to EN 88-1:2011 + A1:2016, EN 13611:2019 and EN13611:2019/AC:2021

## INSTALLATION AND COMMISSIONING

- Check inlet pressure. It must not exceed 500 mbar.
- Fit the regulator respecting the gas flow. See flow arrow on the bottom of the regulator.
  - Once the regulator is in place, check that there are no leaks at the regulator connections.
- With all consumption points downstream of the regulator closed, open the gas tap upstream of the regulator.
  - In the case of automatic VIS MIN, wait a few seconds (approx. 15-20) until the VIS is reset.

In case of manual VIS MIN, actuate the reset device on the controller (by pulling on it) for about 2 seconds.

The regulator will start to regulate when there is any demand for consumption.

**■ FAX** +34 944 982 147


@ EMAIL recgas@recgas.com **WEB** www.recgas.com


#### • ADDRESS

Alonsotegi Elkartegia Módulo N°12, 48810 Alonsotegi, Bizkaia (Spain)



## **BEHAVIOURAL CURVES**

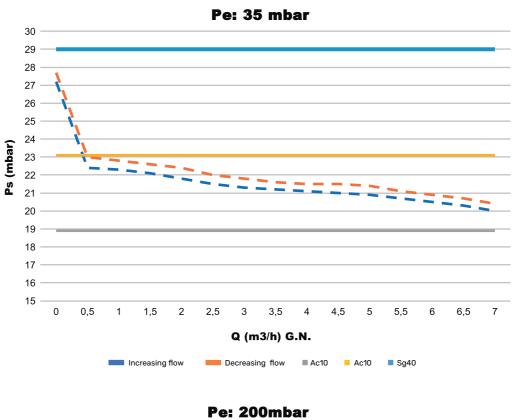

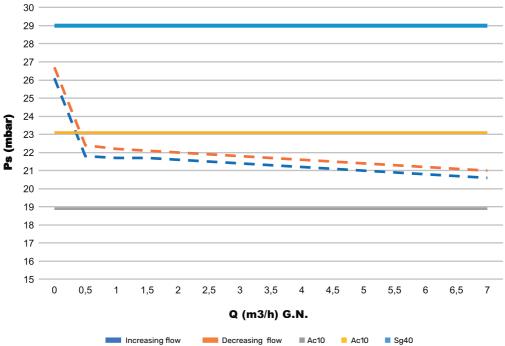


• **TELEPHONE** +34 944 982 043 **⊫ FAX** +34 944 982 147 @ EMAIL recgas@recgas.com **WEB** www.recgas.com

#### • ADDRESS

Alonsotegi Elkartegia Módulo N°12, 48810 Alonsotegi, Bizkaia (Spain)



### **BEHAVIOURAL CURVES**

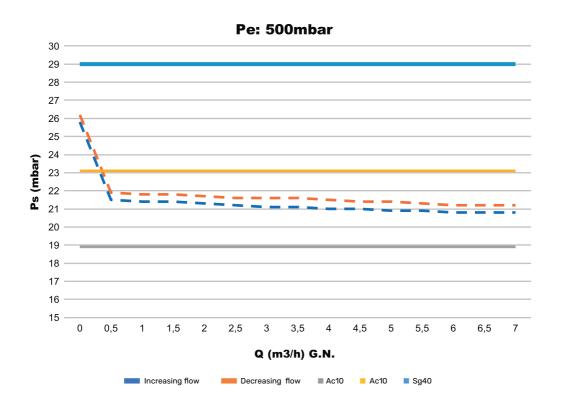

• **TELEPHONE** +34 944 982 043 FAX

<u>+34 944 982 147</u>

@ EMAIL recgas@recgas.com **WEB** www.recgas.com

#### • ADDRESS

Alonsotegi Elkartegia Módulo N°12, 48810 Alonsotegi, Bizkaia (Spain)