

# REGULATOR RGR-90 FF3/4 P0.18-60MBAR 25M3/H UPSO CODE 100178

With an inlet pressure between 35mbar and 2bar, the regulator maintains the outlet pressure constant, within the adjustable range (18-60mbar) for flow rates between 0.5 and 25m3/h.



#### **FEATURES**

- Inlet pressure: 35mbar-2bar
- Output pressure: 18-60mbar (adjustable)
- Securities: UPSO (15mbar)
- Nominal flow rate: 25m3/h
- Pressure tapping: -
- Connections: FF3/4
- Disposition: 90°
- Conduction for venting: -

# DIMENSIONS





• **TELEPHONE** +34 944 982 043

**⊫ FAX** +34 944 982 147 @ EMAIL recgas@recgas.com

**WEB** www.recgas.com • ADDRESS

Alonsotegi Elkartegia Módulo N°12, 48810 Alonsotegi, Bizkaia (Spain)



#### **MATERIALS**

- Membranes and seals, in NBR resistant to Liquefied Petroleum Gas (LPG), Natural Gas (NG) and Synthetic Natural Gas (SNG)
- Aluminum body
- Galvanized steel cover
- Cataphoresis treatment with high resistance on cover and body

- Galvanized steel springs
- Non-metallic internal parts, in PA with fiberglass and acetal resin (POM)
- Stainless steel filter
- Manufactured in the EU

## **COMPLIANCE WITH STANDARDS**



AENOR certificate in accordance with the UNE 60402-1 (2008) standard

()

CE-certified according to 88-1:2011 + A1:2016, EN 13611:2019 and EN13611:2019/AC:2021

### INSTALLATION AND COMMISSIONING

_			
	Check the inlet pressure. It must not exceed 2 bar.		In case of manual VIS MIN, actuate the reset device on the controller (by pulling on it) for about 2 seconds.
	Fit the regulator respecting the gas flow. See flow arrow on the bottom of the regulator.		
	·		The controller will start to regulate when there is
	Once the regulator is in place, check that there are no leaks at the regulator connections.		any demand for consumption.
			Using the regulating screw under the red plug,
	With all consumption points downstream of the regulator closed, open the gas tap upstream of the regulator.		adjust the outlet pressure of the regulator to the desired level.
	loguatori		Once the pressure has been regulated, replace
	If the regulator is fitted with automatic VIS MIN, wait a few seconds (approx. 15-20) until the VIS is reset.		the red plug.

@ EMAIL recgas@recgas.com


🕀 WEB www.recgas.com

#### • ADDRESS


Alonsotegi Elkartegia Módulo Nº12, 48810 Alonsotegi, Bizkaia (Spain)



### **BEHAVIOURAL CURVES**

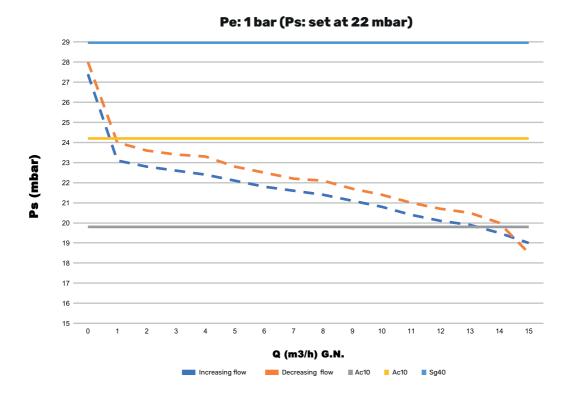

Pe: 1 bar (Ps: set at 37 mbar)

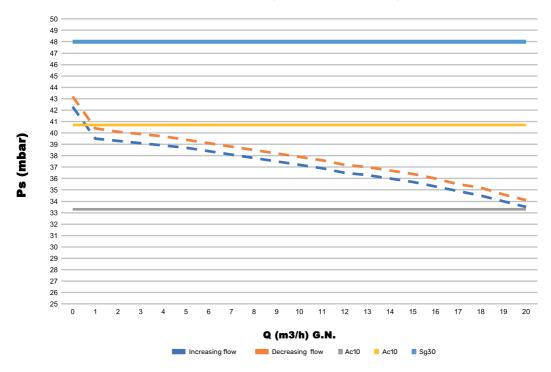


• **TELEPHONE** +34 944 982 043 **⊫ FAX** +34 944 982 147 @ EMAIL recgas@recgas.com

**WEB** www.recgas.com • ADDRESS

Alonsotegi Elkartegia Módulo N°12, 48810 Alonsotegi, Bizkaia (Spain)



#### **BEHAVIOURAL CURVES**

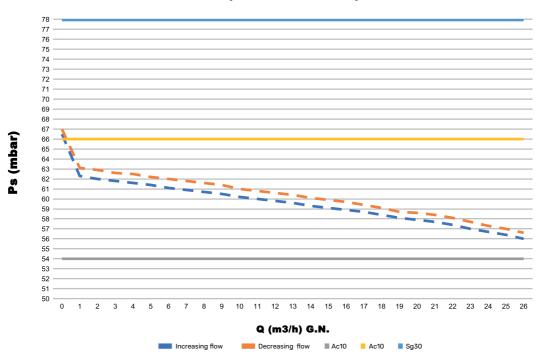

Pe: 1 bar (Ps: set at 60 mbar)

• **TELEPHONE** +34 944 982 043 FAX

+34 944 982 147

@ EMAIL recgas@recgas.com **₩EB** www.recgas.com

#### • ADDRESS

Alonsotegi Elkartegia Módulo Nº12, 48810 Alonsotegi, Bizkaia (Spain)