

# SECURITY VALVE RG180 OPSO (100mbar) MM3/4 (manual) 12m3/h CODE 600006

With an inlet pressure of 22mbar, the safety valve acts by shutting of the gas flow when the outlet pressure exceeds 100mbar.


### **FEATURES**


- Inlet Pressure: Up to 500mbar
- Securities: OPSO (100mbar) manual reset
- Nominal flow rate: 12m3/h
- Pressure tapping: -
- Connections: MM3/4
- Disposition: 180°
- Conduction for venting: -



## DIMENSIONS



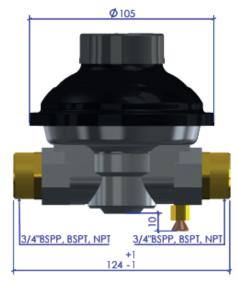

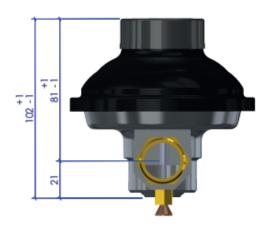

**• TELEPHONE** +34 944 982 043

**■ FAX** +34 944 982 147 @ EMAIL recgas@recgas.com www.recgas.com

#### • ADDRESS

Alonsotegi Elkartegia Módulo N°12, 48810 Alonsotegi, Bizkaia (Spain)



### MATERIALS

- Diaphragms and seals, in NBR resistant to Liquefied Petroleum Gas (LPG), Natural Gas (NG) and Synthetic Natural Gas (SNG)
- Aluminium body
- Galvanised steel cover
- High resistance cataphoresis treatment on cover and body

- Springs in galvanised steel
- Non-metallic internal parts, in PA with fibreglass and acetal resin (POM)
- Stainless steel filter
- Made in the EU

### INSTALLATION AND COMMISSIONING

Check inlet pressure. It must not exceed 500mbar.

- Position the valve in relation to the gas flow. See flow arrow on the bottom of the valve.
- Once the valve is in place, check that there are no leaks at the valve connections.
- With all consumption points downstream of the valve closed, open the gas cock upstream of the valve.
  - Act on the reset device on the valve by pulling on it for about 2 seconds.

• **TELEPHONE** +34 944 982 043 **I⊡ FAX** +34 944 982 147 **@ EMAIL** recgas@recgas.com **WEB** www.recgas.com

#### • ADDRESS

Alonsotegi Elkartegia Módulo N°12, 48810 Alonsotegi, Bizkaia (Spain)