

# REGULATOR RGR-180 LN3/4XLN3/4 PO.60-150MBAR 25M3/H UPSO (MANUAL) CODE 200200

With an inlet pressure between 0.1 and 2bar, the regulator maintains a constant outlet pressure within the adjustable range (60-150mbar) for flow rates between 0.5 and 25m3/h.



# **FEATURES**

Inlet pressure: 0.1-2bar

Output pressure: 60-150mbar (adjustable)

• Securities: UPSO (15mbar) manual reset

Nominal flow rate: 25m3/h

Pressure tapping: -

Connections: LN3/4xLN3/4

Disposition: 180°

Conduction for venting: -



# **DIMENSIONS**







recgas@recgas.com



### **MATERIALS**

- Membranes and seals, in NBR resistant to Liquefied Petroleum Gas (LPG), Natural Gas (NG) and Synthetic Natural Gas (SNG)
- Aluminum body
- Galvanized steel cover
- Cataphoresis treatment with high resistance on cover and body

- Galvanized steel springs
- Non-metallic internal parts, in PA with fiberglass and acetal resin (POM)
- Stainless steel filter
- Manufactured in the EU

### **COMPLIANCE WITH STANDARDS**



AENOR certificate in accordance with the UNE 60402-1 (2008) standard



CE-certified according to 88-1:2011 + A1:2016, EN 13611:2019 and EN13611:2019/AC:2021

### INSTALLATION AND COMMISSIONING

- Check the inlet pressure. It must not exceed 2 bar.
- Fit the regulator respecting the gas flow. See flow arrow on the bottom of the regulator.
- Once the regulator is in place, check that there are no leaks at the regulator connections.
- With all consumption points downstream of the regulator closed, open the gas tap upstream of the regulator.
- If the regulator is fitted with automatic VIS MIN, wait a few seconds (approx. 15-20) until the VIS is reset.


- In case of manual VIS MIN, actuate the reset device on the controller (by pulling on it) for about 2 seconds.
- The controller will start to regulate when there is any demand for consumption.
- Using the regulating screw under the red plug, adjust the outlet pressure of the regulator to the desired level.
- Once the pressure has been regulated, replace the red plug.

recgas@recgas.com




# **BEHAVIOURAL CURVES**

#### Pe: 1 bar (Ps: set at 60 mbar)

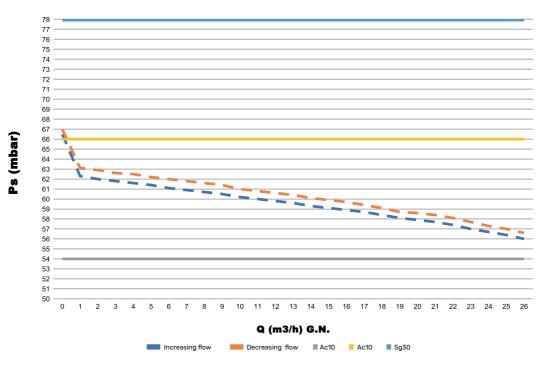

### Pe: 1 bar (Ps: set at 100 mbar)

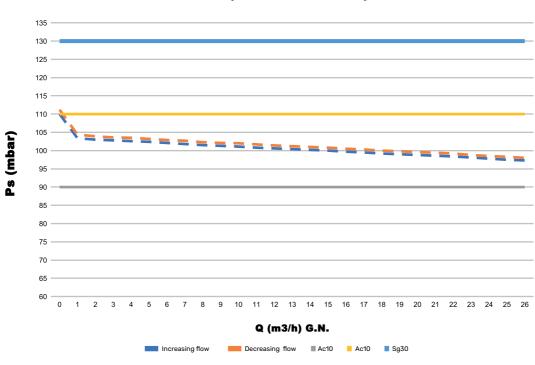



# **BEHAVIOURAL CURVES**

### Pe: 1 bar (Ps: set at 150 mbar)

